




# Retaining Factory Camera

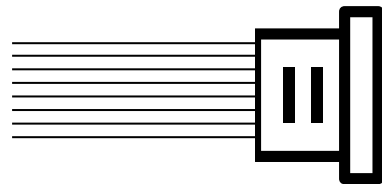


Factory Plug

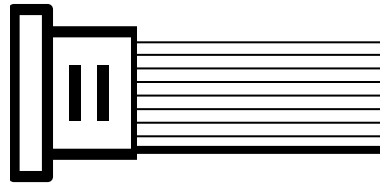


Polaris main wiring harness

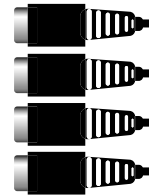

Camera

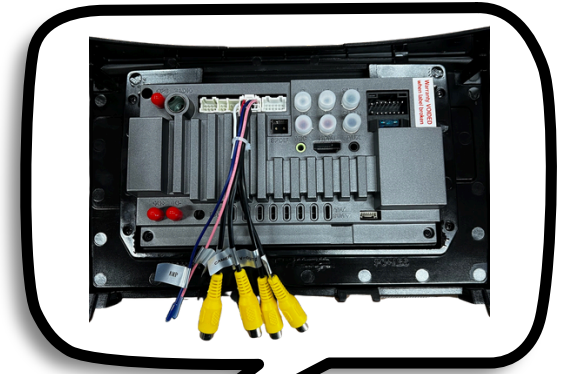


10 pin plug  
plugs into  
back of  
head unit

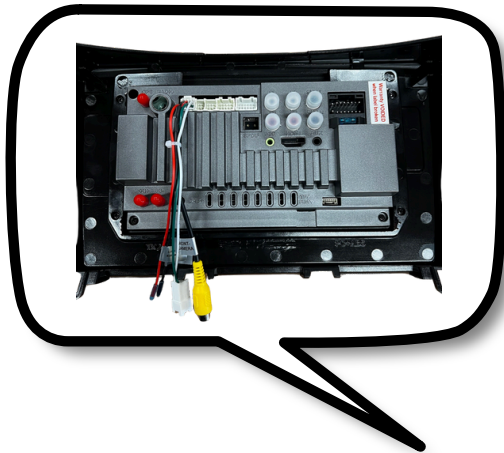


The CANBUS module will pick up your reverse trigger, as long as you have powered it

Canbus module

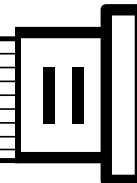


Polaris main wiring harness

8 pin plug, plugs into back of head unit



Don't forget to power the CANBUS module

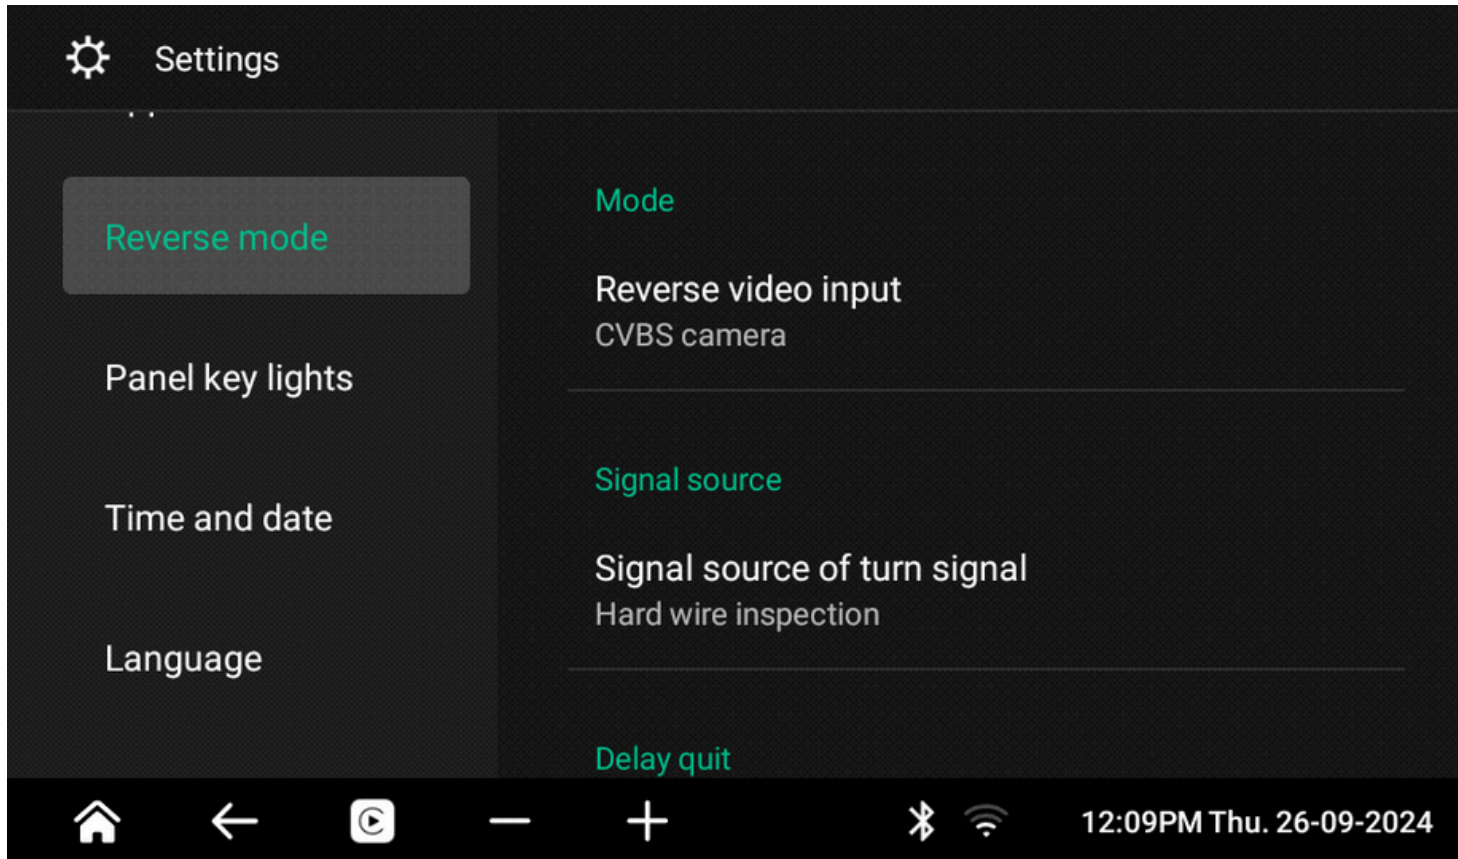

Mode:  
Reverse video Input  
CVBS Camera

Format:  
N/A